


The image shows two isometric views of a pressure transducer adapter. The left view shows the 3/8 inch NPT female end, which has a threaded port with a flange. The right view shows the 1/4 inch NPT male end, which has a threaded port with a flange. To the right of the adapter is a schematic diagram of a pressure transducer. The diagram shows a square symbol representing the transducer, with a vertical double-headed arrow inside. The top terminal is labeled 'P' (Pressure) and the bottom terminal is labeled 'R' (Reference). The left terminal is labeled '2' and the right terminal is labeled '3'. A zigzag line with an arrow points from the right terminal (3) to the right, indicating an output signal.

Taratura Setting		
Codice Code	Taratura standard Standard setting (Q=5 l/min)	Campo di taratura Adj. Pressure range
00*	40 bar 580 psi	5÷40 bar 72.5÷580 psi
01	80 bar 1160 psi	10÷100 bar 145÷1450 psi
02	180 bar 2610 psi	10÷250 bar 145÷3625 psi

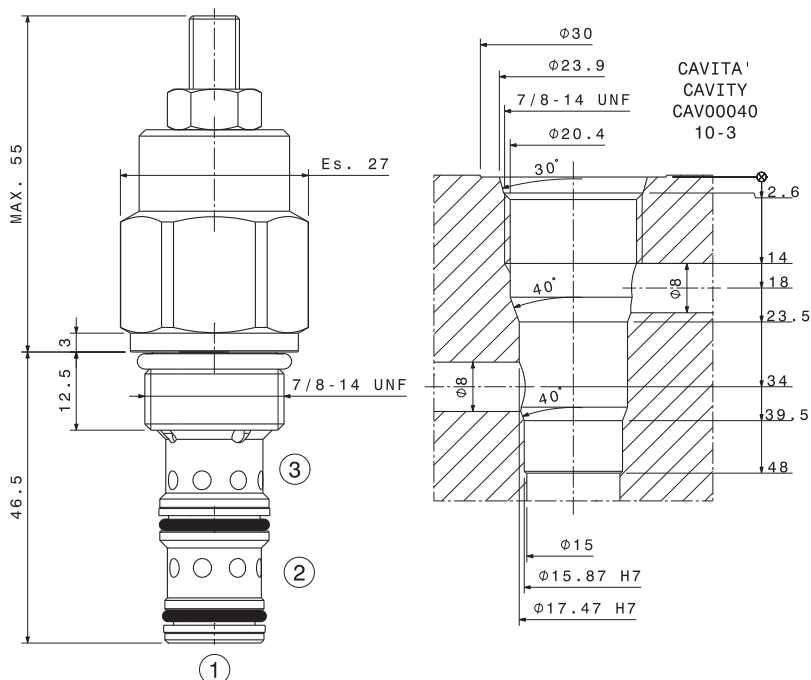

RPP10-C	01	A
Modello Type	Codice taratura Setting code 00, 01, 02	Codice regolazione Adjustment code A, B, C, D

49